



**GWM**

# GWM Ute Cannon Service Schedule



Both distance travelled and times are shown. It is important to service your vehicle at whichever interval occurs first.

Months or Mileage *1000 km	6 5	18 15	30 25	42 35	54 45	66 55	78 65	90 75	102 85	114 95	126 105
Engine oil	R	R	R	R	R	R	R	R	R	R	R
Washer - Drain plug of oil pan	R	R	R	R	R	R	R	R	R	R	R
Engine oil filter	R	R	R	R	R	R	R	R	R	R	R
Fuel filter	I	R	I	R	I	R	I	R	I	R	I
Tension wheel, transition wheel and belt wheel			I		I		I		I		I
EGR Valve		I		I		I		I		I	
Intercooler and connection pipeline		I		I		I		I		I	
Enginge timing belt	First replace at 75,000 km, then replace every 80,000km										
Generator/Water pump belt	First replace at 95,000 km, then replace every 100,000km										
Transmission oil (MT)	R	I	I	R	I	I	R	I	I	R	I
Main reducing gear oil (Front&Rear)	First replace at 45,000 km, then replace every 100,000km or 48Mths whichever occurs first.										
Transfer case oil (4WD)	First replace at 45,000 km, then replace every 100,000km										
Important Bolts and Nuts	I	I	I	I	I	I	I	I	I	I	I
Disc brake	I	I	I	I	I	I	I	I	I	I	I
Parking brake	I	I	I	I	I	I	I	I	I	I	I
Tyres pressure and wear	I	I	I	I	I	I	I	I	I	I	I
Ball joint and dust cover	I	I	I	I	I	I	I	I	I	I	I
Engine air filter	I	R	I	R	I	R	I	R	I	R	I
Radiator (appearance)	I	I	I	I	I	I	I	I	I	I	I
Intercooler (appearance)	I	I	I	I	I	I	I	I	I	I	I
Air conditioner filter element	I	I	R	I	R	I	R	I	R	I	R
Enginge coolant	I	I	R	I	R	I	R	I	R	I	R
Brake fluid	I	I	R	I	R	I	R	I	R	I	R
Battery	I	I	I	I	I	I	I	I	I	I	I
Leakage	I	I	I	I	I	I	I	I	I	I	I
Lights	I	I	I	I	I	I	I	I	I	I	I

R = Replace , I = Inspect

**FIND A DEALER**